

204710-87E18860

FIG. 1

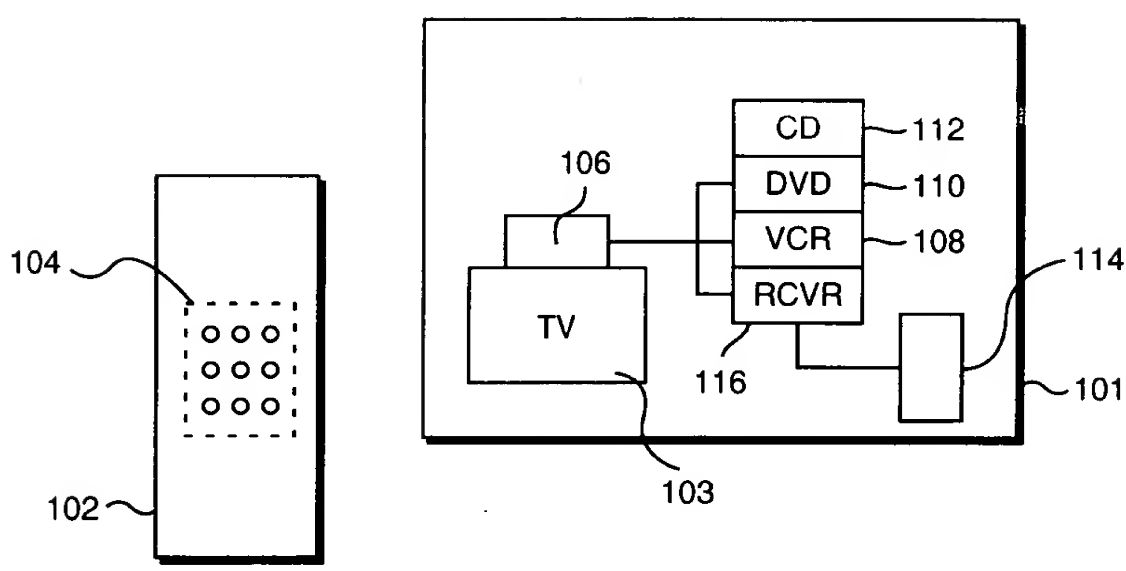


FIG. 2

CHANNEL CHANGING CLASS

CHANNEL UP
CHANNEL DOWN
NUMBER BUTTONS (0-9)
PREVIOUS CHANNEL
TV/VCR

206

VOLUME CHANGING CLASS

VOLUME UP
VOLUME DOWN
MUTE

204

POWER CLASS

POWER
OFF
ON

202

TRANSPORT CLASS

PLAY
STOP
REWIND
FAST FORWARD
NEXT CHANNEL (TRACK, CHAPTER, PRESET)
PREVIOUS CHANNEL (TRACK, CHAPTER, PRESET)
RECORD
PAUSE
NEXT


208

CONTROL CLASS

SURROUND
DISPLAY
MENU
GUIDE
UP
DOWN
LEFT
RIGHT
RESET (EXIT, CANCEL)


210

FIG. 3

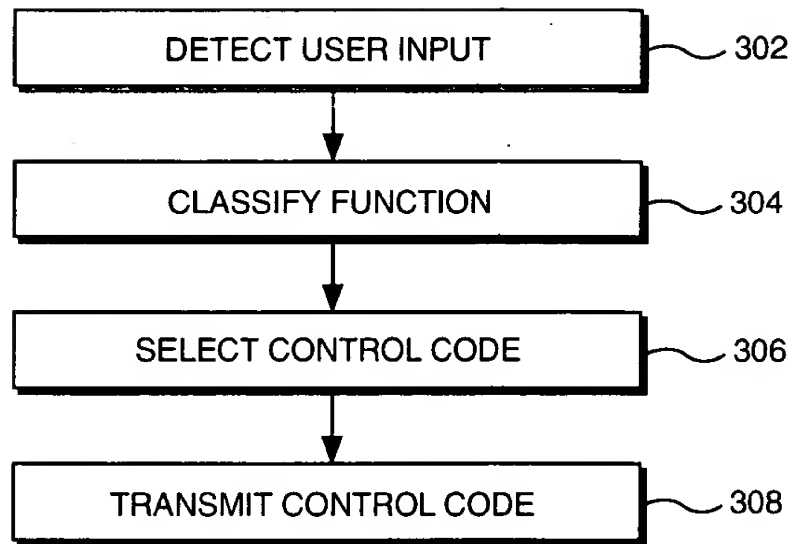


2024-07-01 09:00:00

FIG. 4

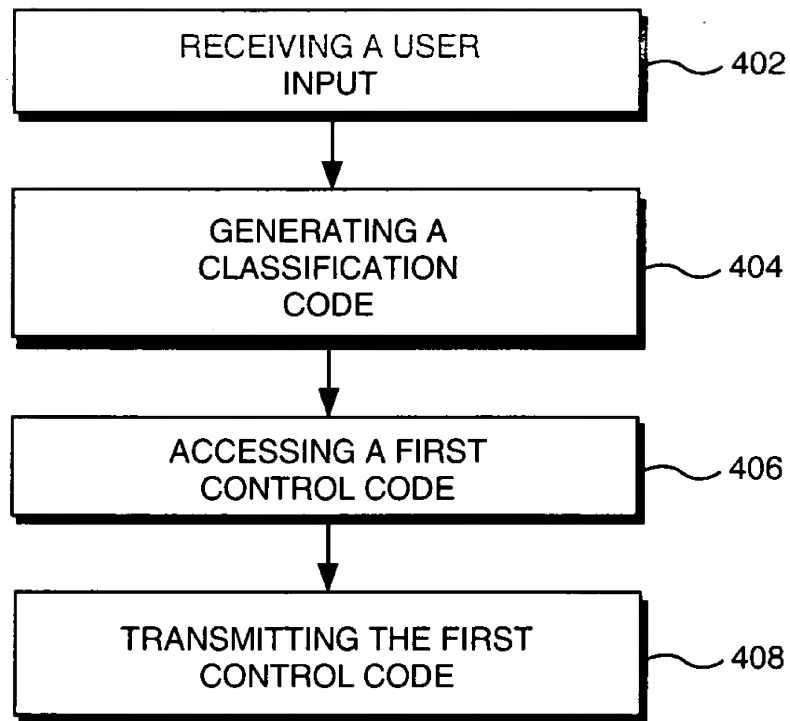

09881318.01402

FIG. 5

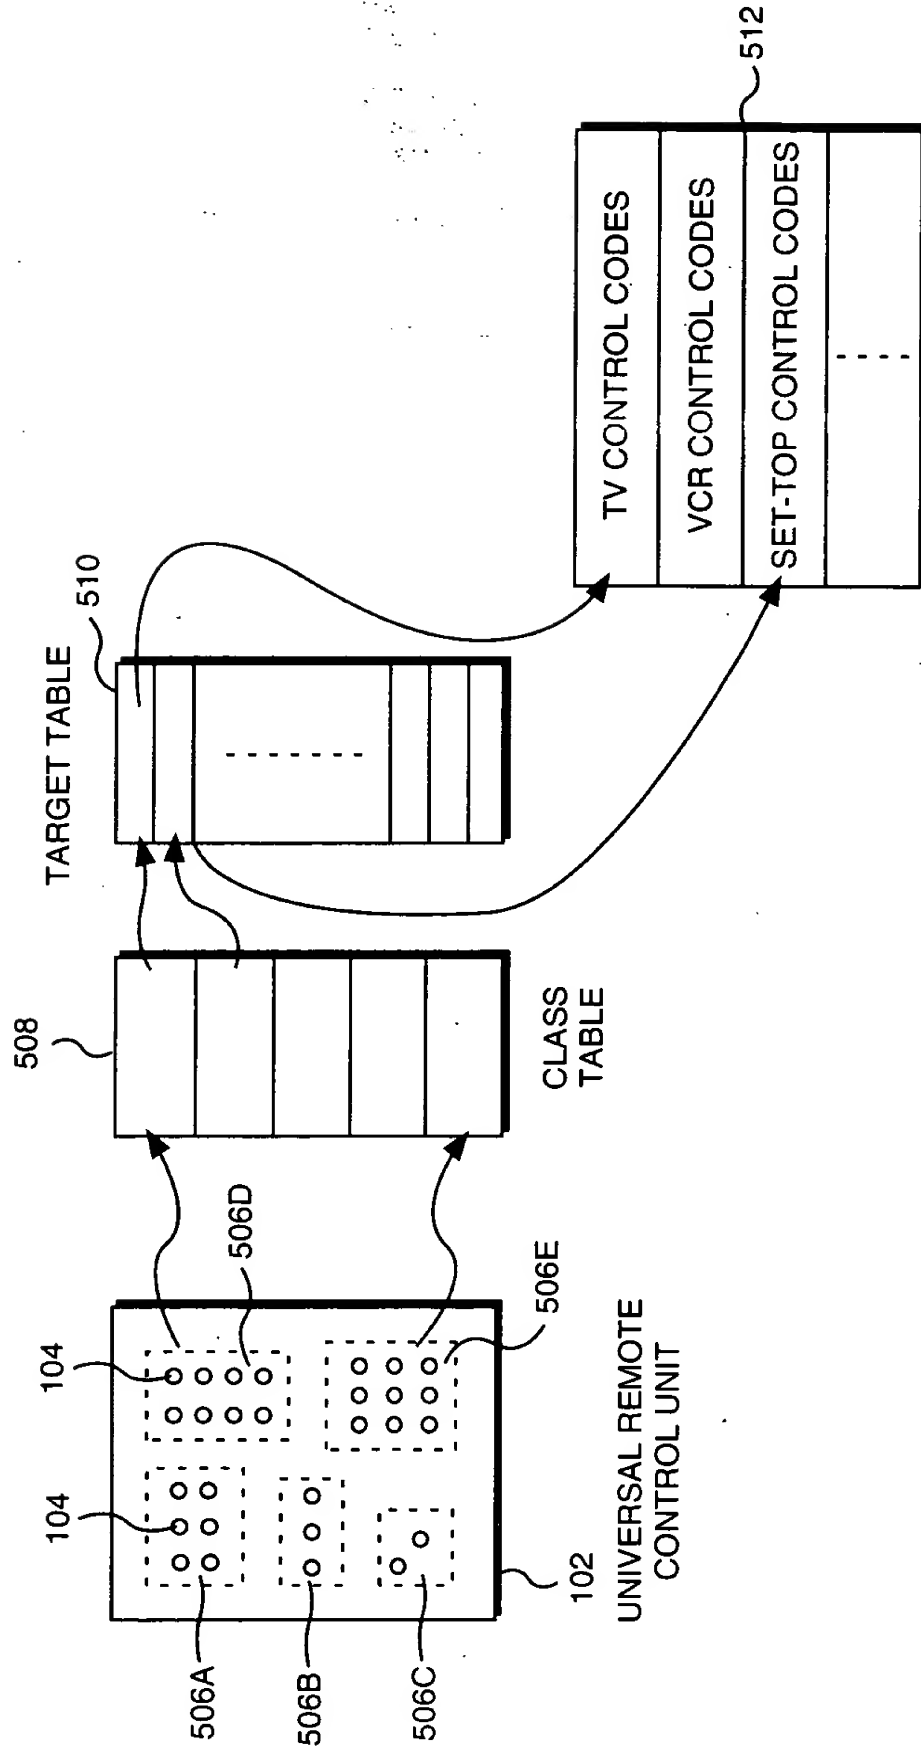

6AA
6AB

FIG. 6AA

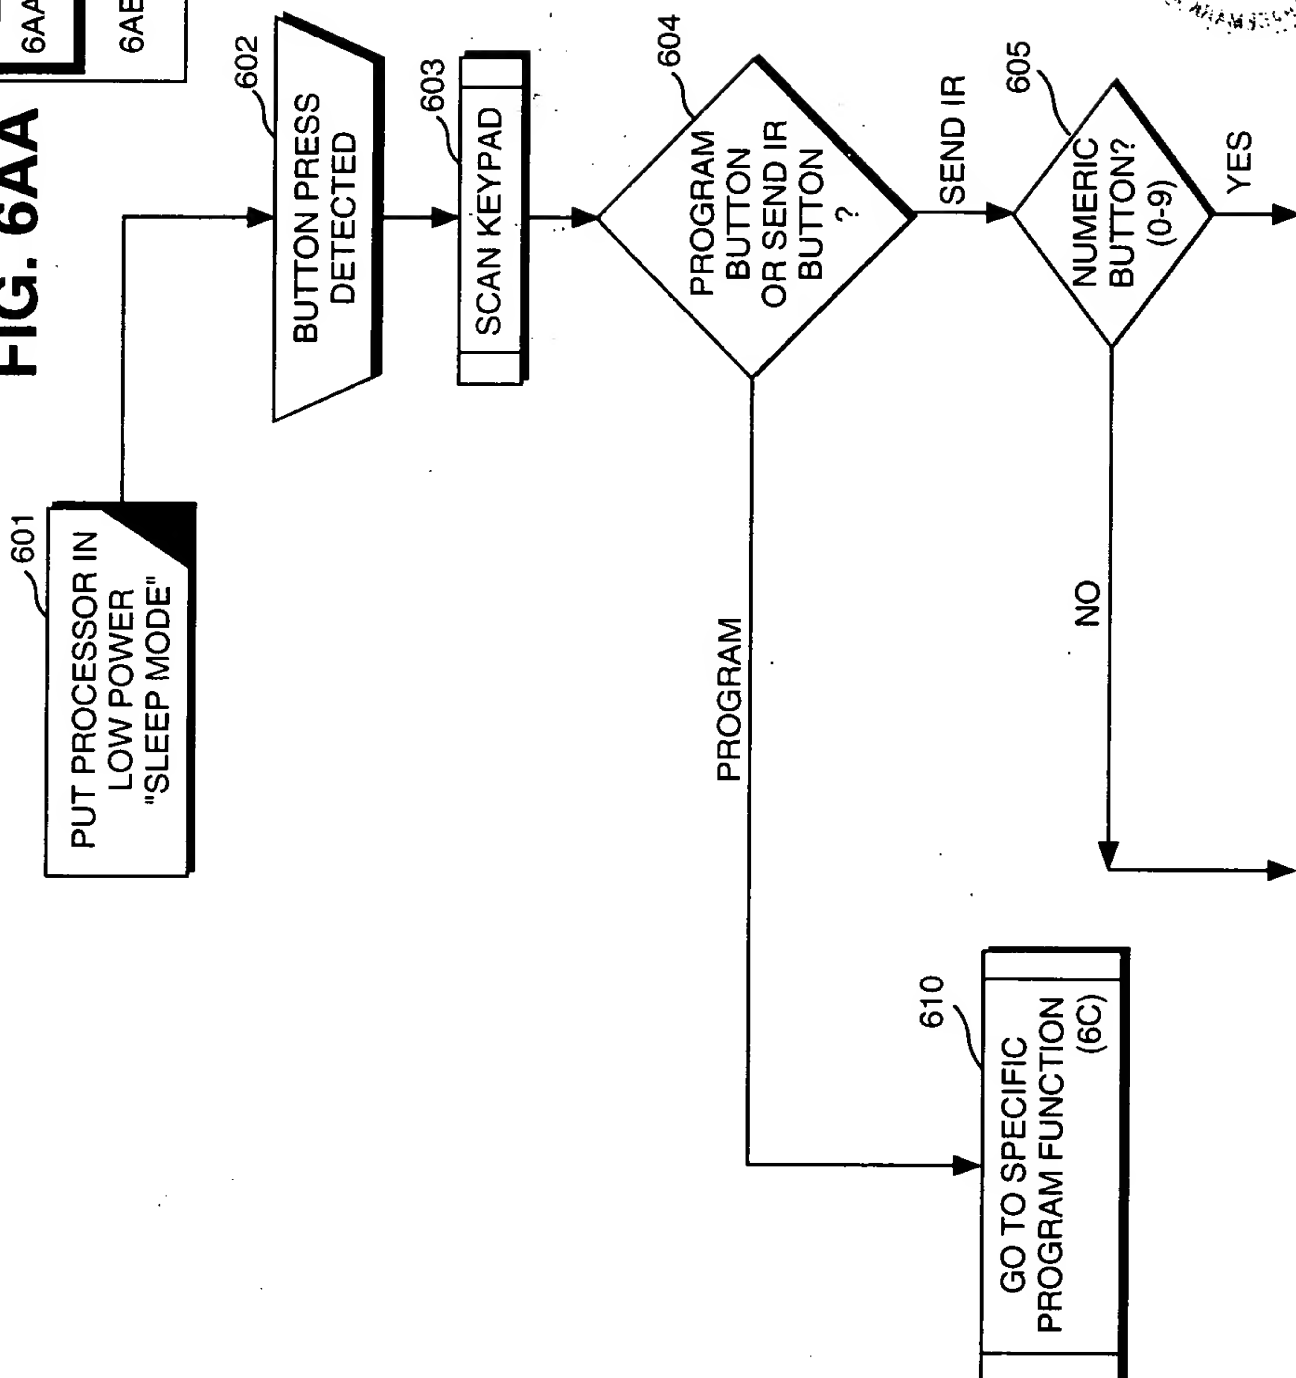


FIG. 6AB

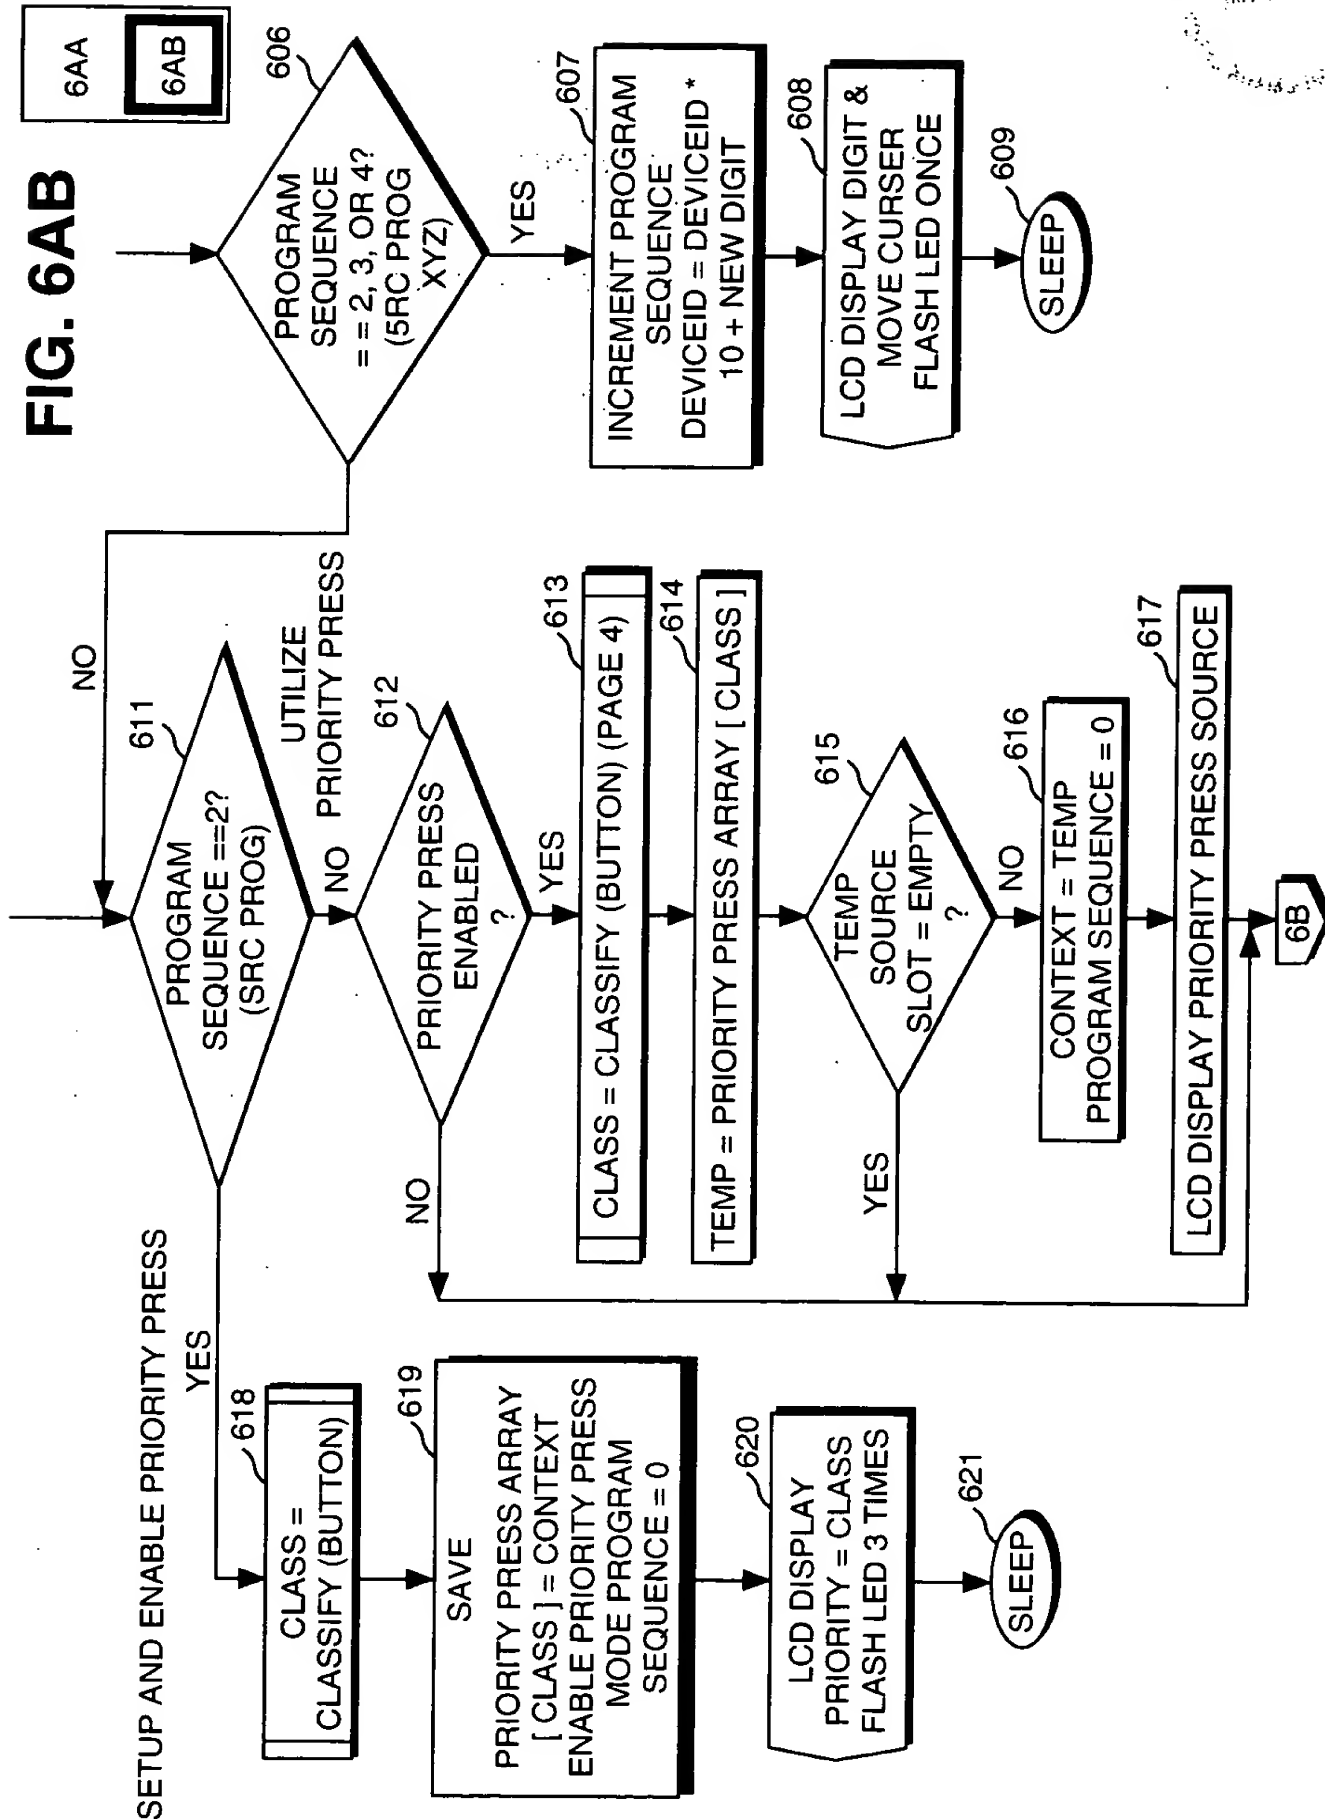


FIG. 6B

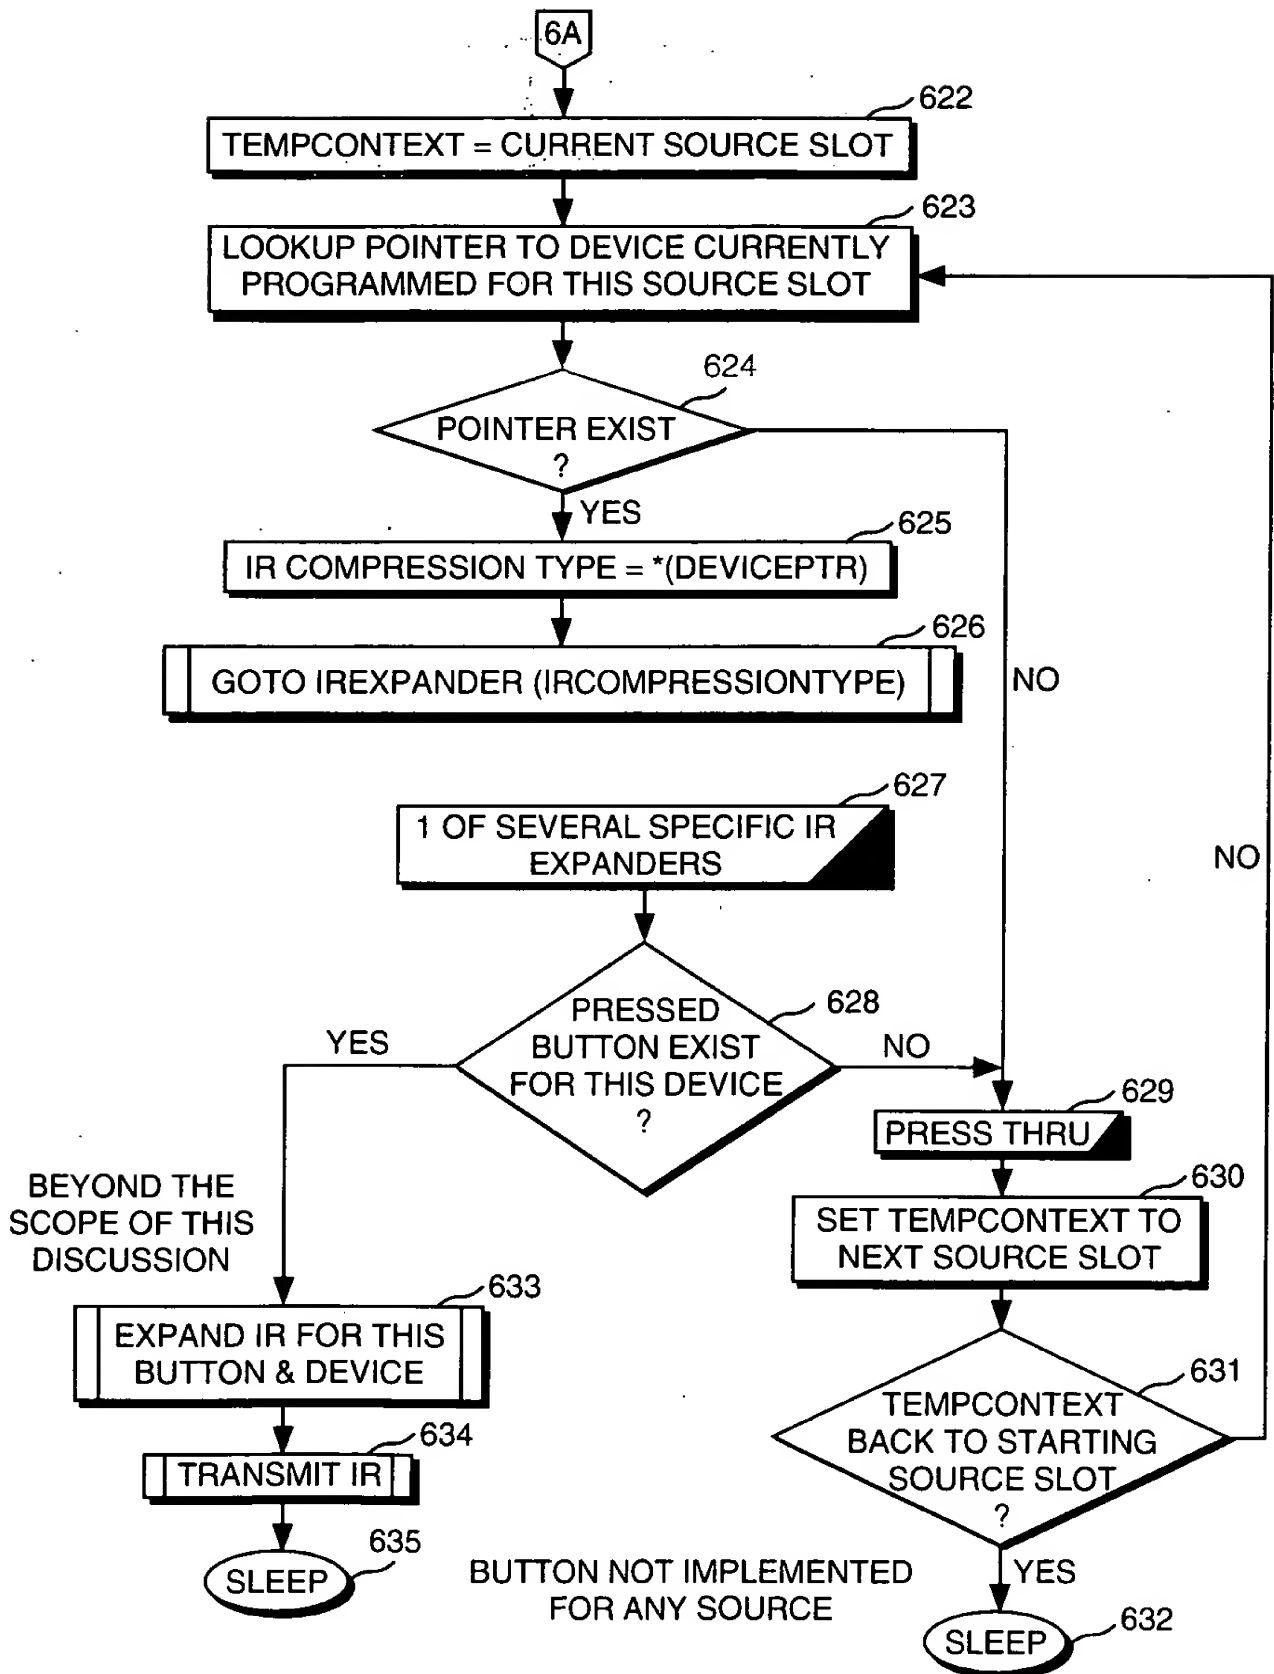


FIG. 6C


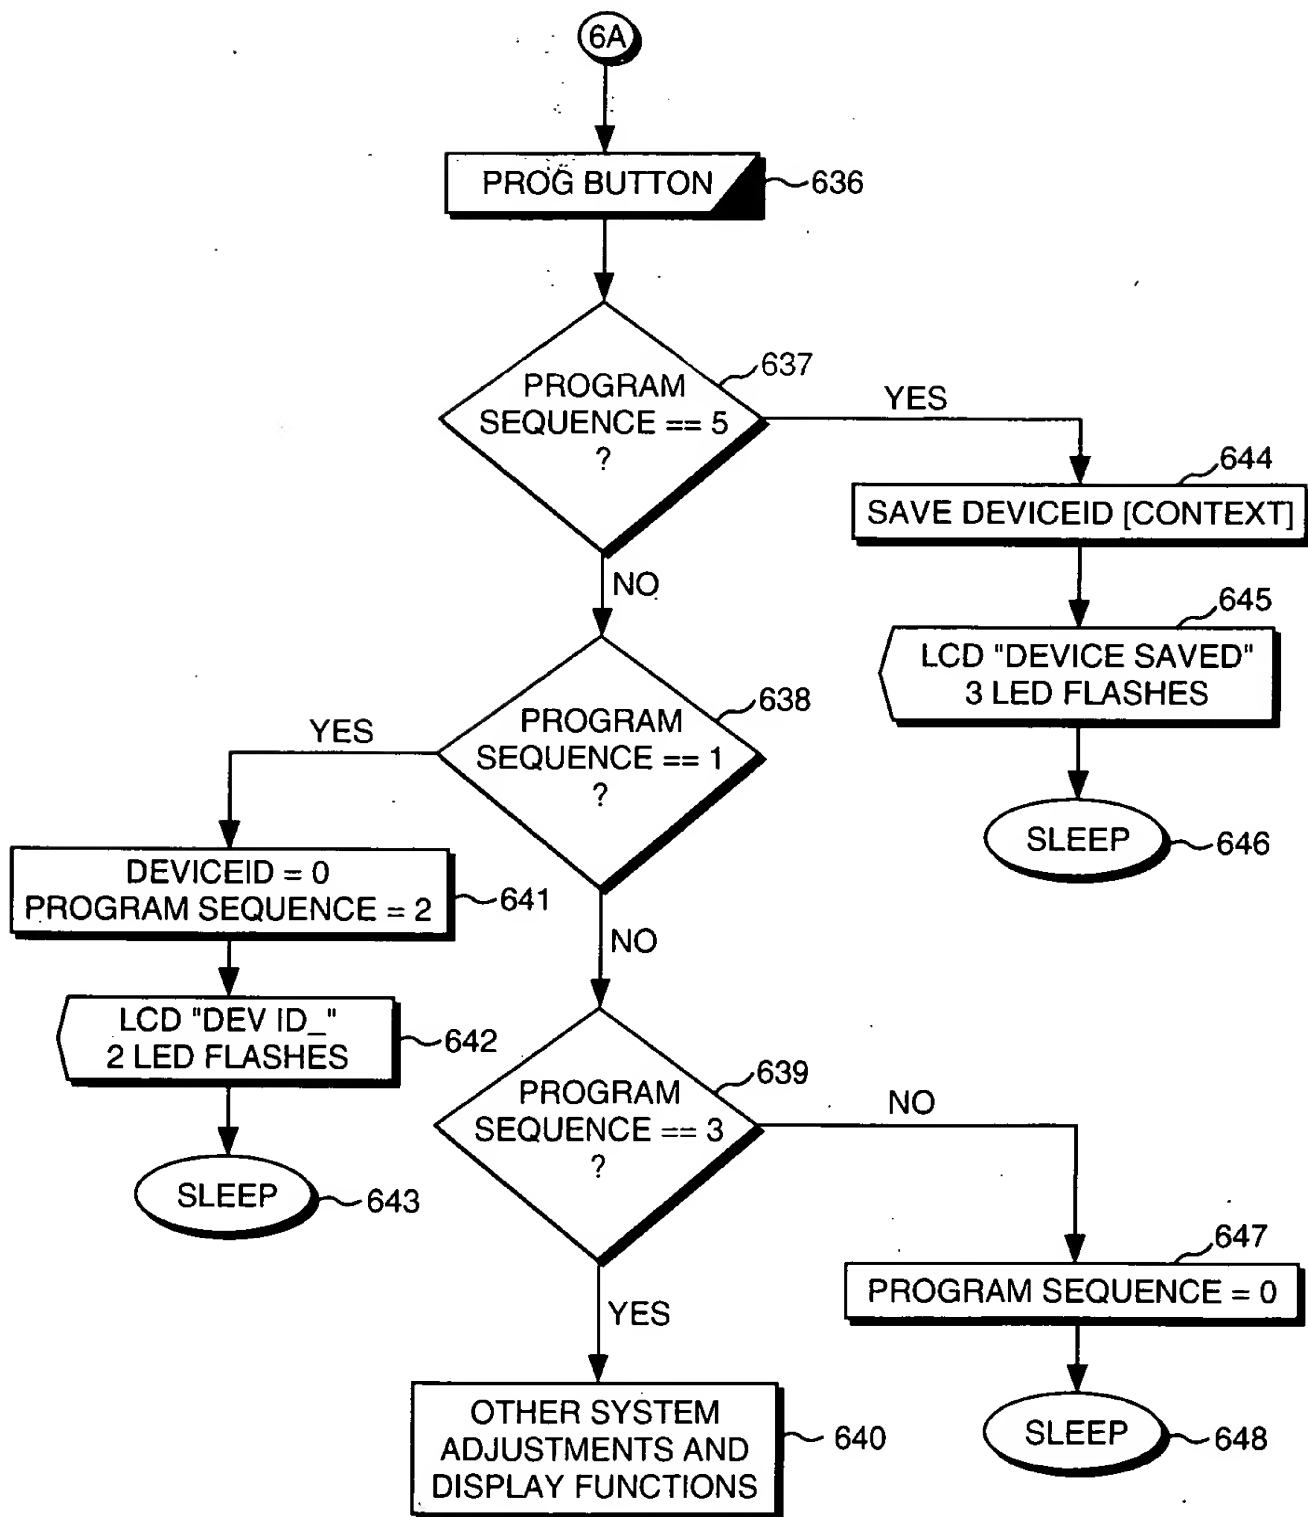



FIG. 7

DISABLE PRIORITY PRESS

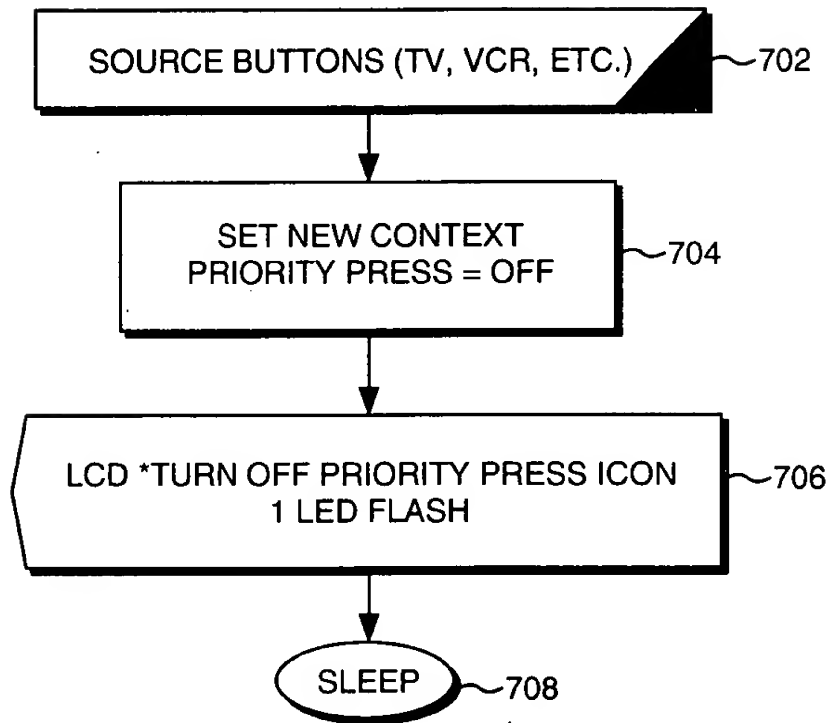

20110101818.01402

FIG. 8

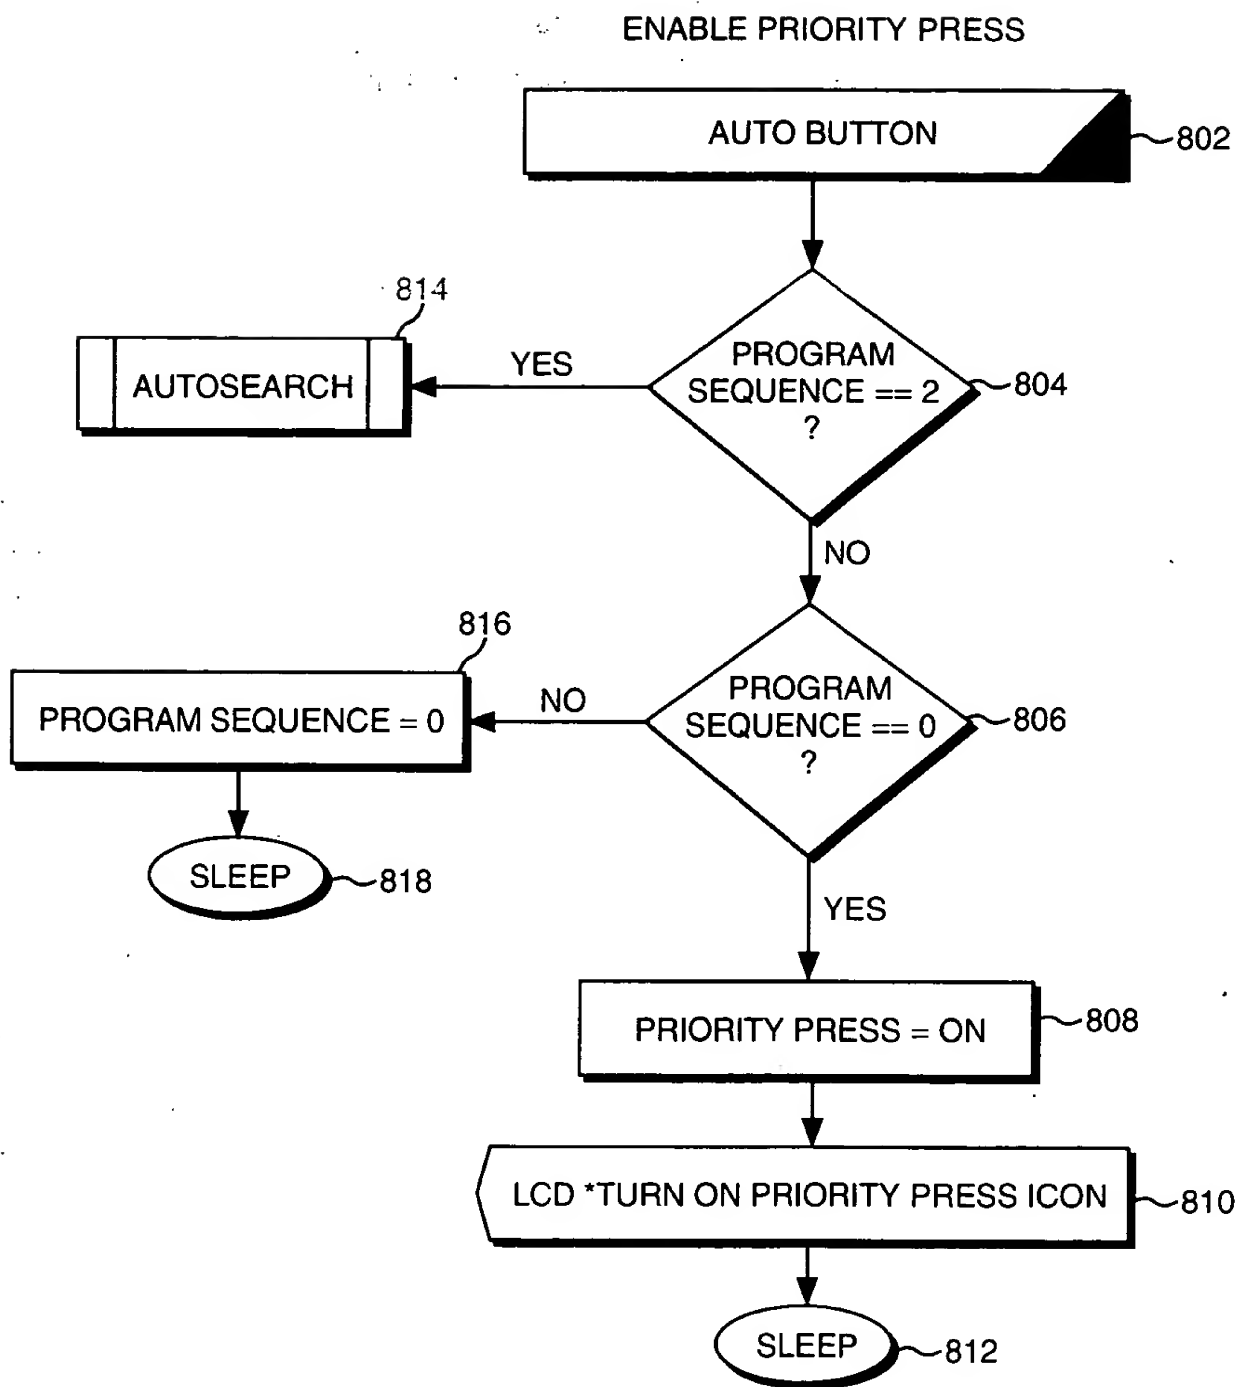

0922131E.011402